



NAUTICAL
KIDS

2022 OWNER'S MANUAL




CONTENTS


INFLATING & DEFLATING	2
INSTALLING FINS	3
SAFETY GUIDELINES	4
FOLDING & STORAGE	5
THE ACTION MOUNT	6
ADJUSTABLE KIDS PADDLE	6
TRANSPORTING YOUR BOARD	7
CARE & MAINTENANCE	8
REPAIRING YOUR BOARD	9
WARRANTY INFORMATION	10
RELEASE OF LIABILITY	11




INFLATING & DEFLATING

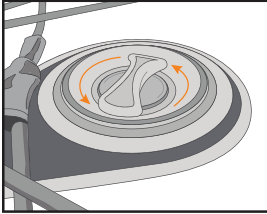

AIR VALVE CAP

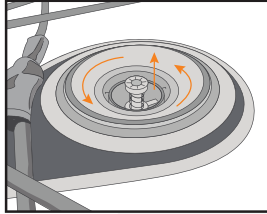

CLOSED/UP POSITION

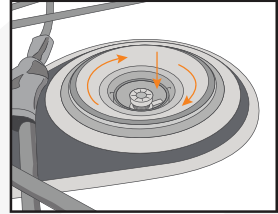

OPEN/DOWN POSITION



INFLATING YOUR BOARD

Generally, the air pump's pressure gauge will start to register a reading after about 150 pumps (approx. 7 PSI). It should take about 250 pumps to achieve 15 PSI.

TO INFLATE:

- 1 Attach the hose to the air pump.
- 2 Locate the air valve on the tail section of the board and open the air valve cap.
- 3 Before connecting the hose to the board, make sure the air valve is in the **CLOSED/UP** position.
- 4 Connect the hose to the board by pressing down and twisting clockwise. Once connected, set the pump to **SETTING 1** and begin inflating.



(NOTE: The pump's pressure gauge will not register a reading until the board reaches 7 PSI.)

- 5 Midway through inflation, when operating the air pump becomes more difficult, set the pump to **SETTING 2**, then continue inflating.
- 6 When nearing full inflation, set the air pump to **SETTING 3** and fill to 15 PSI.
- 7 Once the board is fully inflated, disconnect the hose from the air valve by twisting it counterclockwise. It is normal to hear a small amount of air escape when removing the hose.






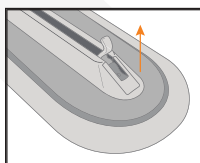
DEFLATING YOUR BOARD

IMPORTANT: The valve wrench is for repairing valve leaks and should never be used for deflation.


TO DEFLATE:

- 1 Make sure the air valve is DRY.
 - 2 Press firmly on the pressure release pin for 2 seconds, then twist clockwise to lock into the **OPEN/DOWN** position.
-  **Be prepared for a loud rush of air when opening the air valve.**
- 3 Allow air to escape from the board for a few minutes before folding.


INSTALLING YOUR FINS




OPEN/UP POSITION

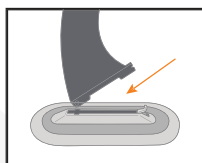

ALIGNED WITH NOTCH

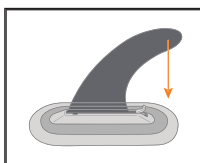

PROPERLY INSERTED

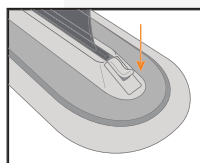


CLOSED/DOWN POSITION



2+1 FIN CONFIGURATION

Your NAUTICAL Kids board comes equipped with three removeable flip-lock nylon fins for added maneuverability and control.

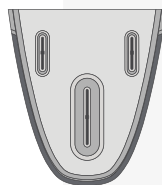

TO INSTALL:

- 1 Make sure the fin box lock is in the **OPEN/UP** position.
- Insert the front of the fin into the notched section of the fin box.
- 2 Rock the fin back and down until it's in place, then set the lock lever to the **CLOSED/DOWN** position.
 - 3 Confirm each fin is securely attached before paddling.



SAFETY FIRST!



FOLLOW LOCAL BOATING LAWS


IMPORTANT: Remember to check local laws and regulations regarding the safe and proper use of this product. Always paddle with a U.S. Coast Guard approved personal flotation device (PFD).



Never go paddleboarding in severe weather or water conditions that might inhibit your ability to steer the board or return to shore safely. Don't paddle before dawn, after sunset, or in any other poor lighting conditions that might impair visibility.



Minors should always use this product with adult supervision.

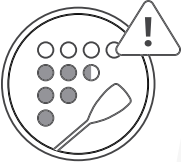

Never use this product beyond your own skills or ability.




FOLDING & STORING YOUR BOARD



FOLDING YOUR BOARD

IMPORTANT: Dry the board completely before tightly folding for storage. Excess moisture may cause mildew or mold damage.

When folding the board, always start at the nose, making sure the air valve is in the **OPEN/DOWN** position. Once the board is completely folded, set the air valve to the **CLOSED/UP** position, then wrap the strap around the rolled board and place it in the bag.

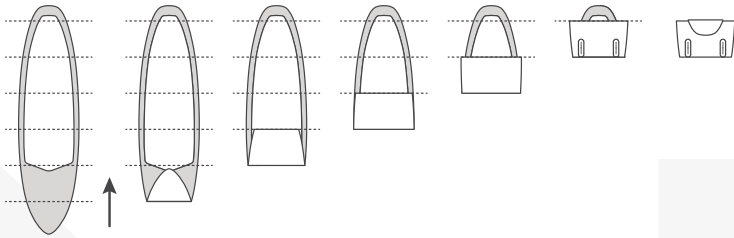

TO FOLD:

- 1 Once the board is completely dry and fully deflated, lay it deck-side up on a flat surface.
- 2 Begin folding the board tightly in sections, starting from the nose.
- 3 Continue folding until the board is completely rolled up, then set the air valve to the **CLOSED/UP** position.



IMPORTANT: Avoid standing the rolled board on its side on rough surfaces such as concrete or rocks. This can cause damage to the first layer of the rail.





THE ACTION MOUNT



ATTACHING ACCESSORIES

Your board has a built-in **ACTION MOUNT** with M8 size thread, allowing you to customize your board with a variety of accessories. Be sure to **ATTACH YOUR ACCESSORY AFTER INFLATING** and remember to **REMOVE IT BEFORE DEFLATING**.

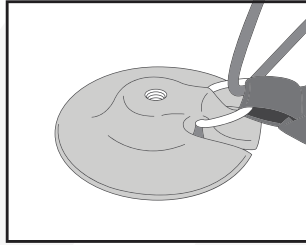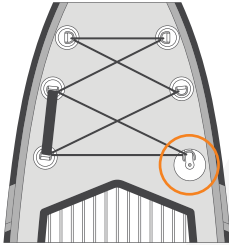

ACCESSORY MOUNT

KIDS SUP PADDLE



! **IMPORTANT: DO NOT REMOVE SHAFT STYROFOAM**

Your board comes with a 3-piece paddle designed specifically for shorter riders. **DO NOT REMOVE** any styrofoam from the paddle shaft, as it provides buoyancy and allows the paddle to float.



Always disassemble and rinse your paddle with fresh water after each use and allow it to dry before reassembling.



TO OPEN:

Grab the notched sides of the C-clamp, firmly pulling it towards you.



TO CLOSE:

Once the paddle is at the desired length, apply gentle thumb pressure, pressing the C-clamp shut. **Be careful not to pinch your fingers when adjusting paddle length!**



TRANSPORTING YOUR BOARD



IMPORTANT: Do not transport your board while inflated. Your board is designed to be compact for convenient storage and travel. Never transport an inflated paddle board on top of a vehicle. Due to lack of weight when inflated, the board will travel poorly if strapped to the roof of a moving vehicle. Damages or warping incurred by improper transport are not covered by warranty.




When transporting the board, be sure to avoid sharp objects. Punctures are not covered by warranty.



Keep the board clear of any heat-producing items such as camp stoves, gas lamps, etc. Damages resulting from heat are not covered by warranty.




CARE & MAINTENANCE

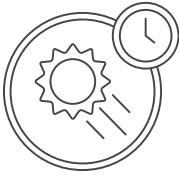

IMPORTANT: PROLONGED HEAT EXPOSURE

Never leave your paddleboard exposed to direct sunlight when out of the water. Always store your paddleboard in the shade when not in use. If you must expose your board to direct sunlight during transport or temporary storage, it is safest to keep the bottom facing up. Prolonged exposure to the sun, even while paddleboarding, may impact the integrity of the board materials. Damage resulting from heat is not covered by the manufacturer's warranty.

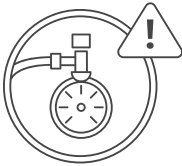

RECOMMENDED BOARD PRESSURE: **15 PSI**

Your board can hold up to 25 PSI. However, the recommendation is 15 PSI as the board will remain rigid at 15 PSI and no benefit is gained by inflating further.

If the board is inflated cold to 25 PSI and then placed in direct sunlight, the heat will increase the pressure, causing potential overinflation and damage to the board's seams. This damage is not covered by warranty.



AIR PUMP MAINTENANCE

Regularly clean the air filter located under the pressure gauge. (The gauge unscrews from the top by hand.) Over time, the pump may naturally lose lubrication and you may need to reapply more lubricant. We recommend using white lithium grease. To lubricate:

TO LUBRICATE:

- 1 Open the top cap of the pump and pull out the plunger.
- 2 Spread a thin layer of lubricant on the black gasket on the bottom of the plunger, then reassemble the pump.





BOARD MAINTENANCE

Sun, sand, and saltwater will degrade any manmade material over time. Rinse off sand and saltwater deposits from your paddleboard with fresh water, then wash with soap and water and store in a cool, dry environment after each use. Allow carry handles to dry completely prior to storing for a prolonged period.

REPAIRING YOUR BOARD




EMERGENCY REPAIR KIT

This board comes with an emergency repair kit that includes a valve wrench and repair patches for small leaks and/or tears. Repair glue is not included for shipping reasons but can be found on our website.



For best results, use the PVC adhesive found on our website. This waterproof adhesive is recommended over other commercial glues.

TO REPAIR:

- 1 Completely deflate the paddleboard.
 - 2 Thoroughly clean the surface around the leak and the matte-finish side of the repair patch with rubbing alcohol. Both surfaces must be free of moisture, oil, and debris.
 - 3 Apply repair glue (not included) carefully and evenly to both the paddleboard surface and the entire matte-finish side of the repair patch.
 - 4 Best practice is to seal the patch to the board using a clamp, leaving the clamp in place for 12-24 hours.
 - 5 Allow repair glue to dry for at least 24 hours before using your paddleboard.
-  Always test your board in shallow water after any repair.



BACKED BY A 2-YEAR WARRANTY

UPON RECEIVING YOUR NEW BOARD, PLEASE INSPECT IT THOROUGHLY AND REPORT ANY MANUFACTURING DEFECTS.

When purchased new, all NAUTICAL boards come with a 2-YEAR limited warranty. In order to receive warranty service, you must be able to provide proof of purchase. The 2-year warranty period begins at the date of shipment. All warranty claims must be submitted via email to info@IROCKERSUP.com with your order number. See below for warranty submission steps.

The buyer is responsible for return shipping for any warranty claim. After inspection of any product found to be defective, iROCKER will either repair or replace the defective part or item as deemed necessary by iROCKER.

Never use this product in a way that modifies the structure of the product or contradicts the information found in your owner's manual.

For a copy of our full warranty policy, and for important warranty and liability information, please refer to our website:

www.irockersup.com

HOW TO SUBMIT A WARRANTY CLAIM:

- 1 Review the warranty policy above to ensure you have a qualifying claim.
- 2 Take a picture and/or video documenting the issue.
- 3 Take a picture of the serial number located near the fin boxes.
- 4 E-mail info@IROCKERSUP.com with subject line "For Warranty Evaluation" and include your pictures and/or video, serial number, order number, and proof of purchase in the body of your e-mail.

Please allow 5-7 business days for our Customer Experience Team to respond. Make sure to make a note of your TICKET NUMBER for easy reference. Please discontinue using your NAUTICAL Kids board until our Customer Experience Team has resolved your warranty issue.



RELEASE OF LIABILITY

By assembling and using this product ("Product"), you agree that you have read and understand the entire Product owner's manual and the on-product warnings and labels, including all instructions and warnings contained in these materials, prior to using the Product, and that copies of such warnings, labels and instructions have been made available to you. By assembling and using this product, you are also agreeing to the terms of this Release of Liability (this "Release"). You agree to wear all recommended protective apparel and to use the Product only according to the instructions provided in the instruction manual and the on-product warnings and labels. You agree not to use the Product under the influence of alcohol, drugs, or anything that could impair your faculties and/or judgment and that you do not have any physical or mental disabilities that may interfere with your use of the Product. You additionally agree that you will ensure any additional or subsequent users of the Product will read and understand the entire instruction manual, the on-product warnings and labels, and this Release. Misuse or improper use of the Product could result in risks, dangers, and hazards which may result in serious injury or death.

BY USING THE PRODUCT, YOU ACKNOWLEDGE AND UNDERSTAND THAT THE ACTIVITY FOR WHICH THE PRODUCT IS DESIGNED IS A POTENTIALLY DANGEROUS ACTIVITY AND INVOLVES THE RISK OF SERIOUS INJURY, DISABILITY, AND EVEN DEATH. BY USING THE PRODUCT, YOU ACKNOWLEDGE THAT YOU ARE VOLUNTARILY PARTICIPATING IN THE ACTIVITY FOR WHICH THE PRODUCT IS INTENDED AND AGREE TO ACCEPT AND ASSUME ANY AND ALL KNOWN AND UNKNOWN RISKS OF INJURY, DISABILITY AND EVEN DEATH ARISING FROM YOUR PARTICIPATION, INCLUDING THOSE RISKS CAUSED BY ACTIONS OR NEGLIGENCE OF RELEASEES AND/OR ANY DESIGN, MANUFACTURING OR ASSEMBLY DEFECTS IN THE PRODUCT.

To read the full Release of Liability, visit:

www.irockersup.com/release-of-liability





NAUTICAL KIDS

Have questions? We're here to help.

1-866-985-8367

info@iRockerSUP.com

