



ULTRA™ S E R I E S

Re-engineered for Compact Convenience

Owner's Manual





 
THE WORLD'S MOST
TRAVEL-FRIENDLY PADDLE
BOARD COLLECTION.

THE ULTRA COLLECTION


CONTENTS

INFLATING & DEFLATING	3
INSTALLING FINS	4
THE ACTION MOUNT	5
ADJUSTABLE SUP PADDLE	5
TRANSPORTING YOUR BOARD	6
FOLDING & STORAGE	7
CARE & MAINTENANCE	8
SAFETY GUIDELINES	9
REPAIRING YOUR BOARD	10
WARRANTY INFORMATION	11
RELEASE OF LIABILITY	12


INFLATING & DEFLATING

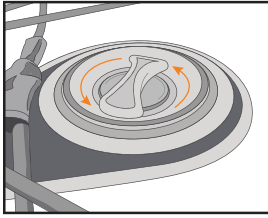

AIR VALVE CAP

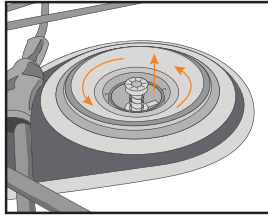 

CLOSED/UP POSITION

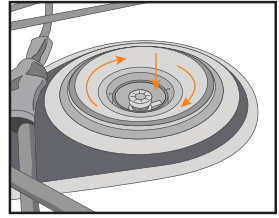 

OPEN/DOWN POSITION



12V ELECTRIC PUMP / INFLATION

Here's a simple guide for inflating your IROCKER ULTRA™ paddle board.

TO INFLATE:

- 1 Connect your pump to your vehicle's cigarette lighter or a 12V battery. Note: we really like having a 12V battery at the ready.
- 2 Set your preferred PSI somewhere between 15 and 23 (if you don't already know your perfect PSI). To do this, use the LCD display screen on the pump.
- 3 Use the convenient inflation hose to connect your pump to your paddle board. It's incredibly simple!
- 4 Press the power button and then relax (or stretch, or snap a pic or whatever).
- 5 Once you hit the ideal PSI, unclasp the hose and get moving.



 
ALL ULTRA™ MODELS
COMPATIBLE WITH
IROCKER HAND PUMP

114" (9'5") CIGARETTE LIGHTER POWER CORD: This small but mighty piece of equipment is how you make your car your the pump's power source. Insert the available end into the cigarette lighter to allow power to flow through the pump. If you don't have a cigarette lighter or a car, then read on.


12V BATTERY ALLIGATOR CLIPS: The pump also comes equipped with "alligator clips" that can connect to the positive and negative terminals of a basic 12V battery. We LOVE this feature! You may not own a car or even want your car when you're out for a paddle. If that's you, then a small investment into a mobile 12V battery is a great idea.

42" (3.5") INFLATION HOSE: The inflation hose is designed specifically to fit all iROCKER and BLACKFIN boards. You'll simply connect one end of the hose to your board and the other end to your electric pump.


INSTALLING YOUR FINS

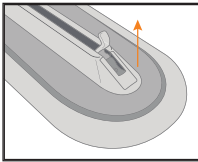


OPEN/UP POSITION

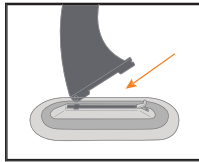 


ALIGNED WITH NOTCH

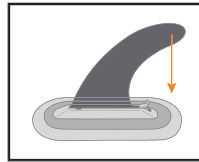 

PROPERLY INSERTED

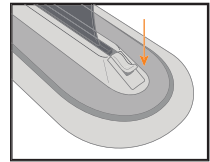 


CLOSED/DOWN POSITION

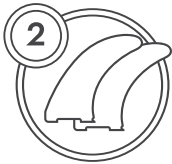 

TWIN FIN CONFIGURATION

 Your iROCKER ULTRA™ Series board comes equipped with two removable tethered flip-lock nylon fins for added maneuverability and control.

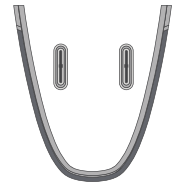


TO INSTALL :

- 1 Make sure the fin box lock is in the OPEN/UP position.
- 2 Insert the front of the fin into the notched section of the fin box. Rock the fin back and down until it's in place, then set the lock lever to the CLOSED/DOWN position.
- 3 Confirm each fin is securely attached before paddling.

TO TETHER :

 - 1 Insert the tether-lock into the fin.
- 2 Turn toward the locked icon until it snaps into position.
- 3 To release the tether, turn toward the unlocked icon and remove the tether.


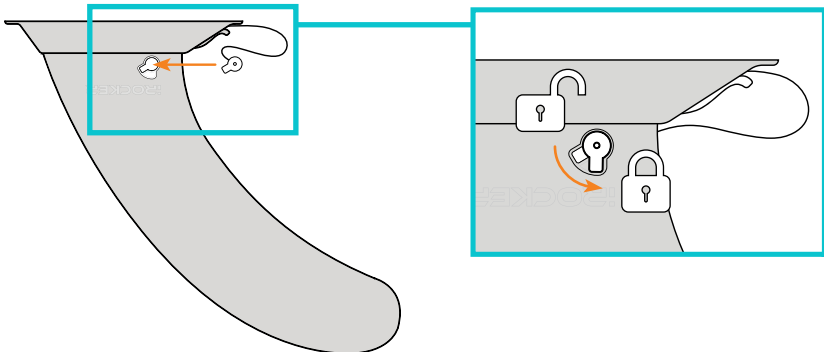


THE ACTION MOUNT



ATTACHING ACCESSORIES

  Your board has 3 built-in **ACTION MOUNTS** with M8 size thread, allowing you to customize your board with a variety of accessories. Be sure to **ATTACH YOUR ACCESSORY AFTER INFLATING** and remember to **REMOVE IT BEFORE DEFLATING**.

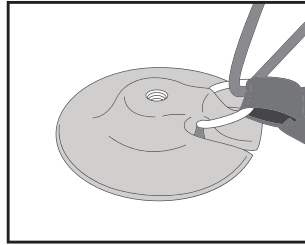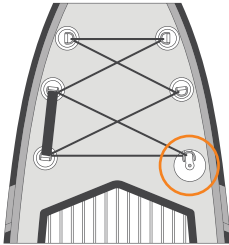

ACCESSORY MOUNT

ADJUSTABLE SUP PADDLE



IMPORTANT: DO NOT REMOVE SHAFT STYROFOAM

Your board comes with a 5-piece paddle for compact convenience. **DO NOT REMOVE** any Styrofoam from the paddle shaft, as it provides buoyancy and allows the paddle to float.



Always disassemble and rinse your paddle with fresh water after each use and allow it to dry before reassembling.



TO OPEN : Grab the notched sides of the C-clamp, firmly pulling it towards you.



TO CLOSE : Once the paddle is at the desired length, apply gentle thumb pressure, pressing the C-clamp shut. Be careful not to pinch your *fingers when adjusting paddle length!*

 
FOLDING & STORING YOUR BOARD



FOLDING YOUR BOARD

IMPORTANT: Dry the board completely before tightly folding for storage. Excess moisture may cause mildew or mold damage.

When folding the board, always start at the nose, making sure the air valve is in the OPEN/DOWN position. Once the board is completely folded, set the air valve to the CLOSED/UP position, then wrap the strap around the rolled board and place it in the bag.

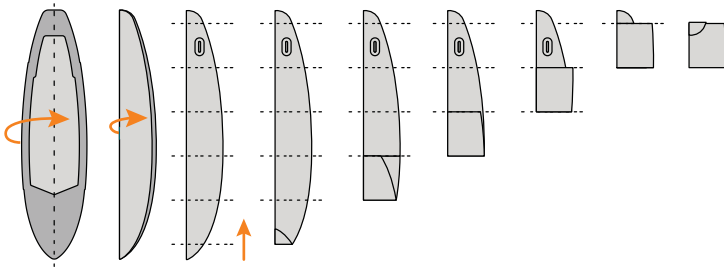


TO FOLD:

- 1 Once the board is completely dry and fully deflated, lay it deck-side up on a flat surface.
- 2 Begin folding the board tightly in sections, starting from the nose.
- 3 Continue folding until the board is completely rolled up, then set the air valve to the CLOSED/UP position.




IMPORTANT: Avoid standing the rolled board on its side on rough surfaces such as concrete or rocks. This can cause damage to the first layer of the rail.

 CARE & MAINTENANCE

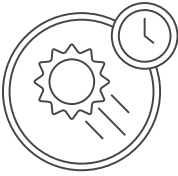

IMPORTANT : PROLONGED HEAT EXPOSURE

 Never leave your paddle board exposed to direct sunlight when out of the water. Always store your paddle board in the shade when not in use. If you must expose your board to direct sunlight during transport or temporary storage, it is safest to keep the bottom facing up. Prolonged exposure to the sun, even while paddle boarding, may impact the integrity of the board materials. Damage resulting from heat is not covered by the manufacturer's warranty.

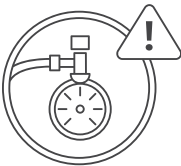

RECOMMENDED BOARD PRESSURE: 15 PSI

Your board can hold up to 25 PSI. However, the recommendation is 15 PSI as the board will remain rigid at 15 PSI and no benefit is gained by inflating further.

If the board is inflated cold to 25 PSI and then placed in direct sunlight, the heat will increase the pressure, causing potential over inflation and damage to the board's seams. This damage is not covered by warranty.



BOARD MAINTENANCE

Sun, sand, and saltwater will degrade any man-made material over time. Rinse off sand and saltwater deposits from your paddle board with fresh water, then wash with soap and water and store in a cool, dry environment after each use. Allow carry handles to dry completely prior to storing for a prolonged period.

TRANSPORTING YOUR BOARD



IMPORTANT: Do not transport your board while inflated. Your board is designed to be compact for convenient storage and travel. Never transport an inflated paddle board on top of a vehicle. Due to lack of weight when inflated, the board will travel poorly if strapped to the roof of a moving vehicle. Damages or warping incurred by improper transport are not covered by warranty.



When transporting the board, be sure to avoid sharp objects. Punctures are not covered by warranty.



Keep the board clear of any heat-producing items such as camp stoves, gas lamps, etc. Damages resulting from heat are not covered by warranty.

SAFETY FIRST!



FOLLOW LOCAL BOATING LAWS

 
IMPORTANT: Remember to check local laws and regulations regarding the safe and proper use of this product. Always paddle with a U.S. Coast Guard approved personal flotation device (PFD).



Never go paddle boarding in severe weather or water conditions that might inhibit your ability to steer the board or return to shore safely. Don't paddle before dawn, after sunset, or in any other poor lighting conditions that might impair visibility.




Minors should always use this product with adult supervision.

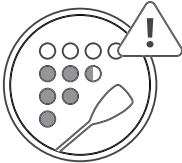

Never use this product beyond your own skills or ability.

 REPAIRING YOUR BOARD

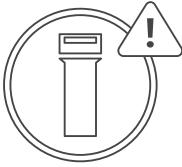


EMERGENCY REPAIR KIT

This board comes with an emergency repair kit that includes a valve wrench and repair patches for small leaks and/or tears. Repair glue is not included for shipping reasons but can be found on our website.



For best results, use the PVC adhesive found on our website. This waterproof adhesive is recommended over other commercial glues.

TO REPAIR:

- 1 Completely deflate the paddle board.
 - 2 Thoroughly clean the surface around the leak and the matte-finish side of the repair patch with rubbing alcohol. Both surfaces must be free of moisture, oil, and debris.
 - 3 Apply repair glue (not included) carefully and evenly to both the paddle board surface and the entire matte-finish side of the repair patch.
 - 4 Best practice is to seal the patch to the board using a clamp, leaving the clamp in place for 12-24 hours.
 - 5 Allow repair glue to dry for at least 24 hours before using your paddle board.
-  Always test your board in shallow water after any repair.

BACKED BY A 3 YEAR WARRANTY

**UPON RECEIVING YOUR NEW BOARD, PLEASE INSPECT IT THOROUGHLY
AND REPORT ANY MANUFACTURING DEFECTS.**

When purchased new, all ULTRA™ boards come with a 3-YEAR limited warranty. In order to receive warranty service, you must be able to provide proof of purchase. The 3-year warranty period begins at the date of shipment. All warranty claims must be submitted via email to info@iROCKERSUP.com with your order number. See below for warranty submission steps.

The buyer is responsible for return shipping for any warranty claim. After inspection of any product found to be defective, iROCKER will either repair or replace the defective part or item as deemed necessary by iROCKER.

Never use this product in a way that modifies the structure of the product or contradicts the information found in your owner's manual.

For a copy of our full warranty policy, and for important warranty and liability information, please refer to our website:

www.iRockerSUP.com

HOW TO SUBMIT A WARRANTY CLAIM:

- 1 Review the warranty policy above to ensure you have a qualifying claim.
- 2 Take a picture and/or video documenting the issue.
- 3 Take a picture of the serial number located near the fin boxes.
- 4 E-mail info@iRockerSUP.com with subject line "For Warranty Evaluation" and include your pictures and/or video, serial number, order number, and proof of purchase in the body of your e-mail.

Please allow 5-7 business days for our Customer Experience Team to respond. Make sure to make a note of your TICKET NUMBER for easy reference. Please discontinue using your NAUTICAL Kids board until our Customer Experience Team has resolved your warranty issue.

RELEASE OF LIABILITY

By assembling and using this product ("Product"), you agree that you have read and understand the entire Product owner's manual and the on-product warnings and labels, including all instructions and warnings contained in these materials, prior to using the Product, and that copies of such warnings, labels and instructions have been made available to you. By assembling and using this product, you are also agreeing to the terms of this Release of Liability (this "Release"). You agree to wear all recommended protective apparel and to use the Product only according to the instructions provided in the instruction manual and the on-product warnings and labels. You agree not to use the Product under the influence of alcohol, drugs, or anything that could impair your faculties and/or judgment and that you do not have any physical or mental disabilities that may interfere with your use of the Product. You additionally agree that you will ensure any additional or subsequent users of the Product will read and understand the entire instruction manual, the on-product warnings and labels, and this Release. Misuse or improper use of the Product could result in risks, dangers, and hazards which may result in serious injury or death.

BY USING THE PRODUCT, YOU ACKNOWLEDGE AND UNDERSTAND THAT THE ACTIVITY FOR WHICH THE PRODUCT IS DESIGNED IS A POTENTIALLY DANGEROUS ACTIVITY AND INVOLVES THE RISK OF SERIOUS INJURY, DISABILITY, AND EVEN DEATH. BY USING THE PRODUCT, YOU ACKNOWLEDGE THAT YOU ARE VOLUNTARILY PARTICIPATING IN THE ACTIVITY FOR WHICH THE PRODUCT IS INTENDED AND AGREE TO ACCEPT AND ASSUME ANY AND ALL KNOWN AND UNKNOWN RISKS OF INJURY, DISABILITY AND EVEN DEATH ARISING FROM YOUR PARTICIPATION, INCLUDING THOSE RISKS CAUSED BY ACTIONS OR NEGLIGENCE OF RELEASES AND/OR ANY DESIGN, MANUFACTURING OR ASSEMBLY DEFECTS IN THE PRODUCT.

To read the full Release of Liability, visit:

www.irockersup.com/release-of-liability



iROCKER

Have Questions? We're here to help.

1-866-985-8367

info@iROCKERSUP.com

ULTRA™
S E R I E S