





QUICK START GUIDE


INFLATING AND DEFLATING

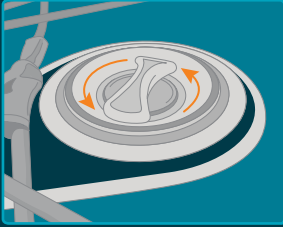

AIR VALVE CAP

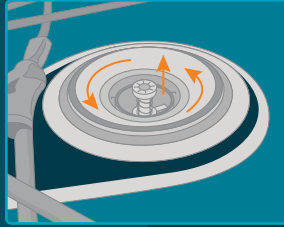


CLOSED/UP POSITION

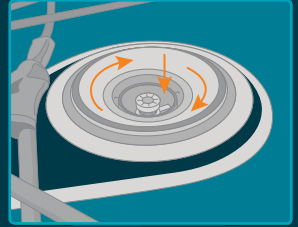

OPEN/DOWN POSITION


+

INFLATING


- 1 Before connecting the hose, make sure the inflation valve is in the **CLOSED/UP** position.
- 2 Connect the hose and set the pump to **SETTING 1**, then begin inflating.
 *The pump's pressure gauge will not register a reading until the board reaches 7 PSI.*
- 3 Midway through inflation, when pumping becomes more difficult, set the pump to **SETTING 2** and continue inflating.
- 4 When nearing full inflation, set the pump to **SETTING 3** and fill to 12-16 PSI.

-


DEFLATING

- 1 Make sure the air valve is **DRY**.
- 2 Press firmly on the pressure release pin for 2 seconds, then twist clockwise to lock into the **OPEN/DOWN** position.
 *Be prepared for a loud rush of air when opening the air valve.*
- 3 Allow air to escape from the board for a few minutes before folding.


FIN INSTALLATION

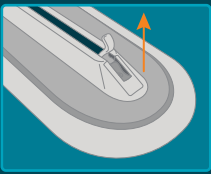


OPEN/UP POSITION

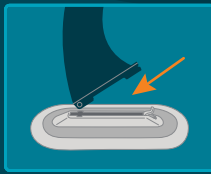

ALIGNED WITH NOTCH

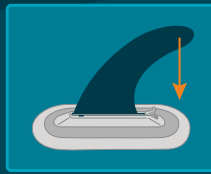


PROPERLY INSERTED

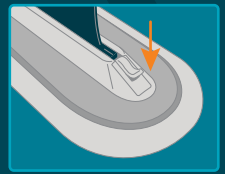

CLOSED/DOWN POSITION


- 1 Make sure the fin box lock is in the **OPEN/UP** position.
- 2 Insert the front of the fin into the notched section of the fin box. Rock the fin back and down until it's in place, then set the fin lock lever to the **CLOSED/DOWN** position.
- 3 Confirm each fin is securely attached before paddling.

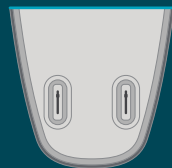

TWIN FIN CONFIGURATION

FOLDING YOUR BOARD

- 1 Once the board is completely dry and fully deflated, lay it deck-side up on a flat surface.
- 2 Fold the entire board in half lengthwise, then begin folding in sections, starting from the nose.
- 3 Continue folding until the board is completely rolled up.

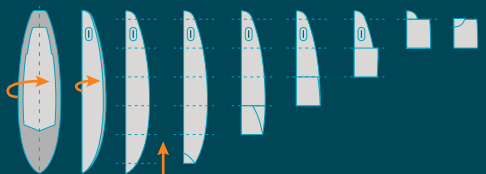

Have questions? We're here to help.

1-866-985-8367

irockersup.com





Have questions? **We're here to help.**

1-866-985-8367

info@irockersup.com